
FROM BOX TO SCREEN

Up and running in *a few minutes.*

This guide takes you from an unopened box to a screen showing your content. You need a TV with HDMI, a power outlet, a phone and an internet connection: preferably a network cable, otherwise your Wi-Fi and its password.

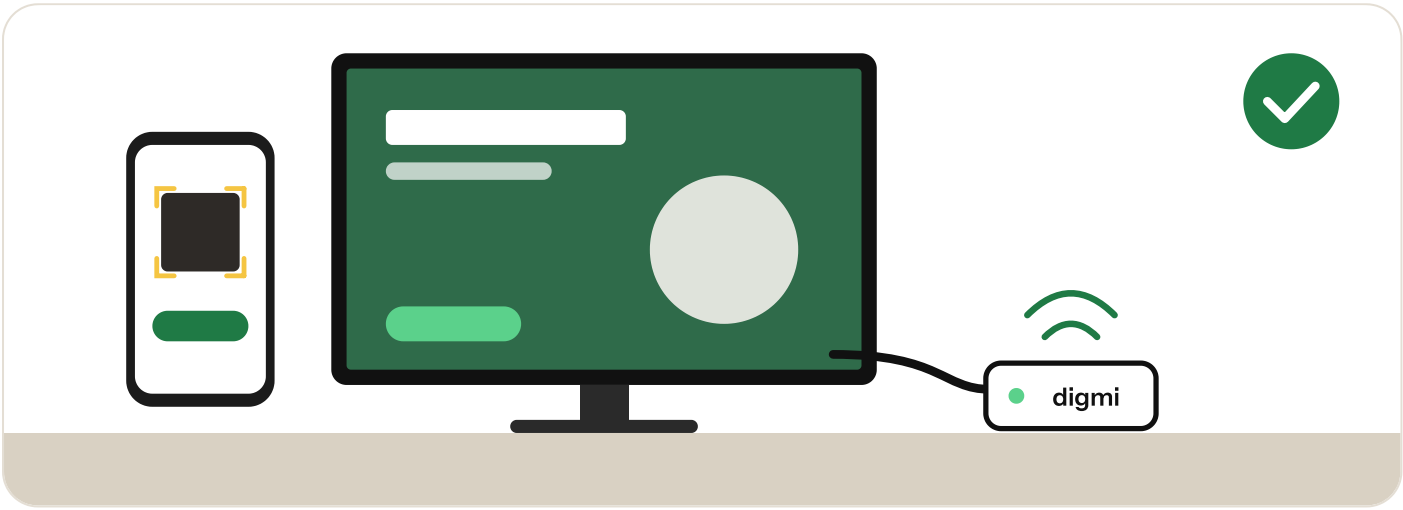

PART 1 · PLUG IN

1. Open the box
2. Choose a spot for the Box
3. Unpack the parts
4. Connect the HDMI cable (and network cable)
5. Connect the power
6. Done – time to set up


PART 2 · SET UP WITH YOUR PHONE

7. QR code 1: connect to the screen's Wi-Fi *(Wi-Fi only)*
8. QR code 2: rotation and your Wi-Fi *(Wi-Fi only)*
9. QR code 3: activate the screen

IN THE BOX

- digmi Box
- HDMI cable
- Power cable


PART 1 **Plug** *in*

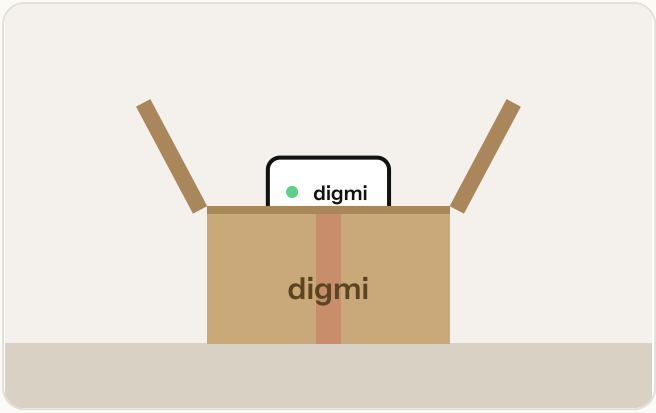

1 STEP 1 OF 9

Open the *box.*

Put the box on a table and open the lid carefully. Don't push a knife deep into the carton – the cables are right under the lid.

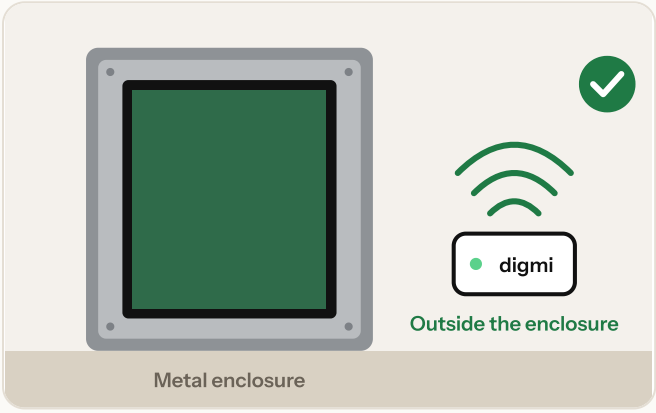


2 STEP 2 OF 9

Pick a good *spot.*

Place the Box near the TV and a power outlet – preferably **outside** the TV's metal enclosure.

- Metal blocks the Wi-Fi signal. Inside the enclosure the Box easily loses its connection.
- For example, place it on top of the enclosure or mount it on the wall next to it.
- Is there a network socket or a router nearby? Then a **network cable** will reach – it gives the most stable connection.

Tip: the closer to the router, the more stable the connection.

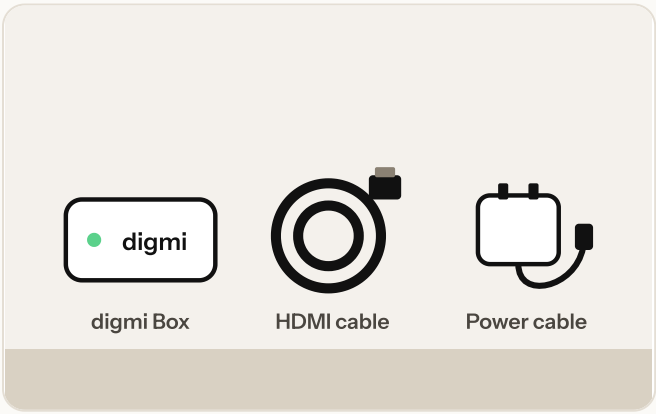


3 STEP 3 OF 9

Unpack the *parts.*

Take out the three parts and lay them in front of you:

- **digmi Box** – the little computer that runs the screen
- **HDMI cable** – carries the picture to the TV
- **Power cable** – the power adapter for the Box

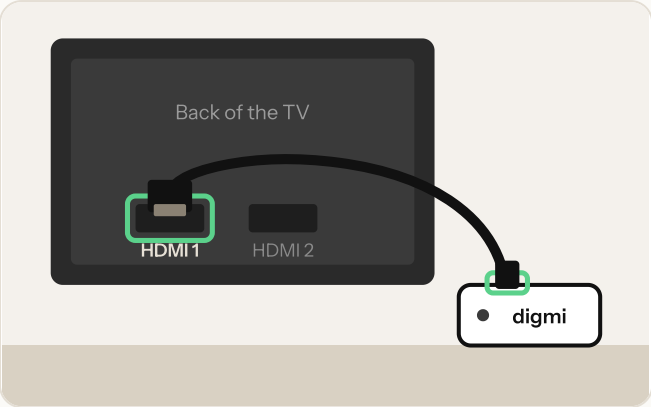


4 STEP 4 OF 9

Connect the *HDMI cable.*

- Plug one end into the **HDMI 1** port on the TV.
- Plug the other end into the Box's HDMI port.
- **If you can: connect a network cable** between the Box and the router or network socket now, before the power. It is better than Wi-Fi. Otherwise you connect the Box to your Wi-Fi in step 8.

Tip: set the TV's source to **HDMI 1** with the remote (the Source or Input button).

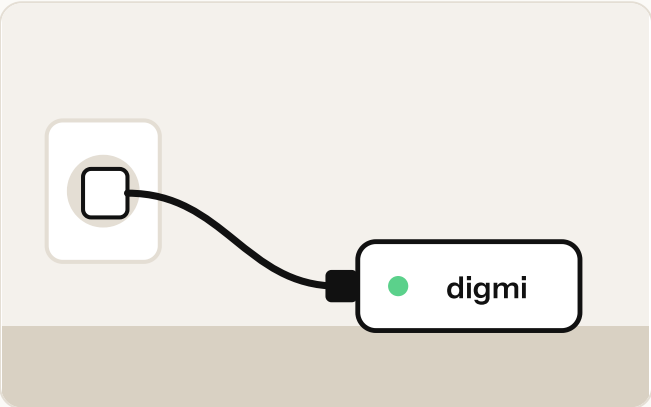

5 STEP 5 OF 9

Connect the *power.*

Plug the power cable into the Box and the adapter into a power outlet. The Box starts by itself – there is no power button.

The light on the Box comes on when it gets power. Starting up takes about a minute.



6 STEP 6 OF 9

Done! Time to *set up.*


After a moment the TV shows **QR code 1**. Everything is connected, and you continue with your phone.

With a network cable you don't need Wi-Fi: the TV skips QR code 1 and 2 and shows **QR code 3** straight away. Go to step 9. The picture is shown in portrait – if your TV hangs in landscape, contact digmi and we will rotate it.

No picture? Check that the TV is set to HDMI 1 and that the HDMI cable is firmly plugged in at both ends.

PART 2

Set up with *your phone*

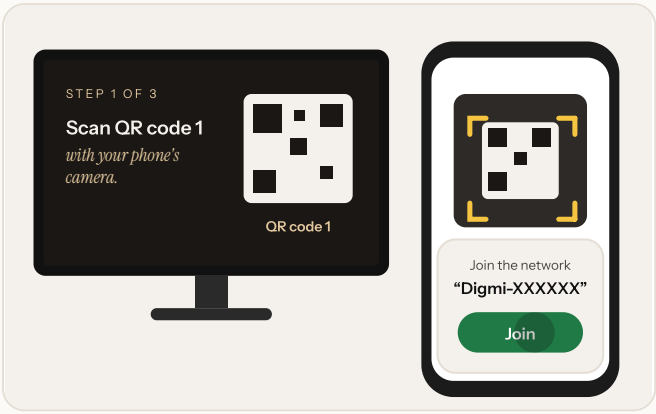


7 STEP 7 OF 9 · QR CODE 1 · WI-FI

Scan *QR code 1.*

- Open your phone's camera and point it at the QR code on the TV.
- Tap **Join** when the phone asks about the network **Digmi-XXXXXX** – it is the screen's own Wi-Fi.
- Wait a moment. The TV switches to **QR code 2** by itself.

No page opens? Join the Digmi network in your phone's Wi-Fi settings and type **10.42.0.1** in the browser.

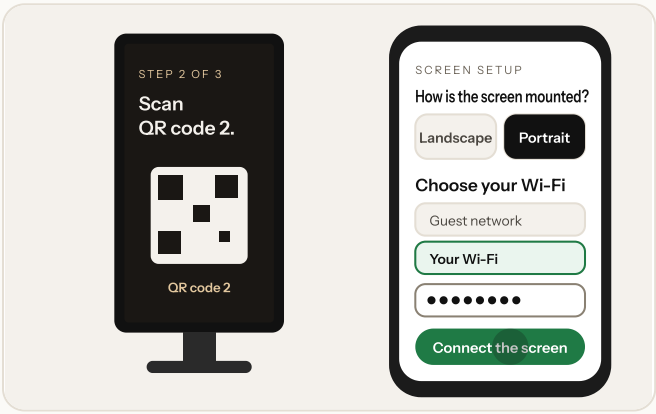


8 STEP 8 OF 9 · QR CODE 2 · WI-FI

Rotation and *your Wi-Fi.*

- Scan **QR code 2**. The setup page opens on your phone.
- Under **How is the screen mounted?** choose **Portrait** or **Landscape**. The picture on the TV turns within a few seconds. If it is upside down, tap **Flip the picture**.
- Choose your Wi-Fi, enter the password and tap **Connect the screen**.

The phone drops the screen's Wi-Fi after a while – that is expected. **Watch the TV**, it shows how it is going.

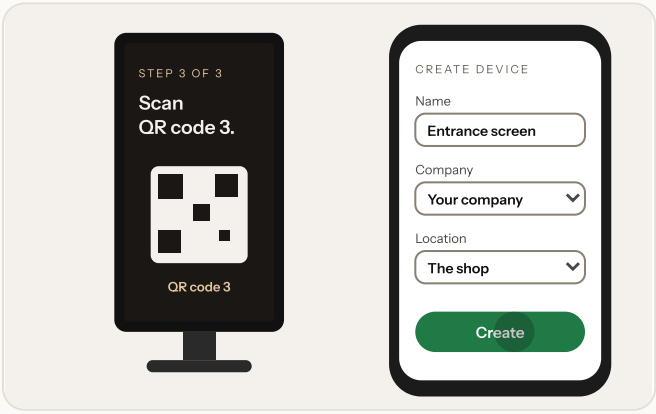

9 STEP 9 OF 9 · QR CODE 3

Activate the *screen.*

- Scan **QR code 3** and sign in to your digmi account (**Sign in**).
- Name the screen under **Name**, for example "Entrance screen".
- Choose your company under **Company** and the place under **Location**.
- Tap **Create**. The screen starts by itself.
- **Done!** When the TV shows your content, the installation is finished.

No account? Tap **sign up for an account**, create one and then do the same steps again.